


YYK-Q63

Bluetooth 5.3 Headphones

Product Manuals

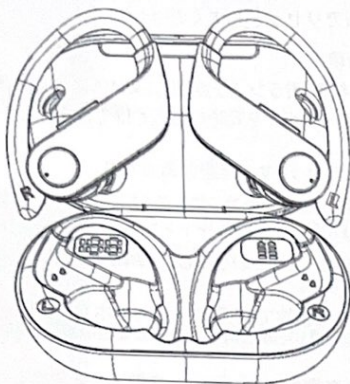

If you have a question that is not listed here, please do not hesitate to contact us by email. Customer Service Department email address.

vipservice@amazonteam.work

FAQ

Why is there no sound from the headset? Or why is the concert disconnected?

Please check the phone network is normally work, the network speed is not slow, and the music is being loaded. Please check whether your phone is connected to two audio devices at the same time. Press and hold the multifunction key twice to exit the connection. The distance of Bluetooth is 10m, please make sure there are no obstacles. Besides, the phone needs to be close to the headphones. If the surrounding environment is interfered or the magnetic field is too strong, Bluetooth signal transmission will be affected. Open the interface of the phone's Bluetooth, click on contact pairing, delete the pairing record, search for Bluetooth, and pair again. You can restart the phone or reset the headphones.

Charging problems

Reset the headset firstly, restart the phone, delete the connection history, search and then pair again. If it still doesn't work, follow these steps:

1. Turn off the Bluetooth function of your phone. Before turning off, please cancel all previously connected Cancel all the previously connected device names "YYK-Q63".
2. Remove the left and right earphones from the case and manually press and hold the button for 5 seconds to power off.
3. With the device shut down, manually press and hold the multifunction button on the left and right headphones for 10 seconds.
4. When you hear the prompt tones "Power on" and "Power off" and see the red and blue lights flash twice, put your left and right

CONTENTS

Product introduction	1
Package Contents	2
Instructions for use	
1. Power supply	2
2. Calling call function	3
3. Listen music	3
4. Monaural/Binaural mode	4
5. Reset pairing	5
Common problems	
1. Bluetooth not found	6
2. Charging problem	7
3. Auto turn off	8
4. Only one ear has sound	8
5. Sound intermittent	9
Parameter Specification	10
Warranty measures	11

ears back into the charging case and check whether the charging mode is enabled.

5. Remove the left and right earphones from the charging case at the same time and connect them to your phone.


Why does the headset turn off automatically?

Make sure that the headset has enough power. In addition, when you do not use the headphones for 10 minutes, the headphones will automatically disconnect from the Bluetooth connection.

Why can't charge the charging case?

1. Make sure that the charging case or phone charger is in good condition and connected properly.
2. Poor contact is possible. Use your fingers to press the left and right headphones, and fully connect the charging case of the left and right headphones to the charging case.
3. The charging case of the left and right headphones may be dirty, dusty or sweaty. When putting back the charging case for charging, please wipe with alcohol or cloth.
4. Please wipe off the sweat and put it back in the charging case for charging, the indicator light will lights up.
5. If you hear "Battery Low", please charge the headset. When the LED display number of the charging case reaches "10", please charge the charging case. Be careful not to exhaust the power in the headphones and charging case, because that may shorten the life of the built-in lithium battery.

Product introduction

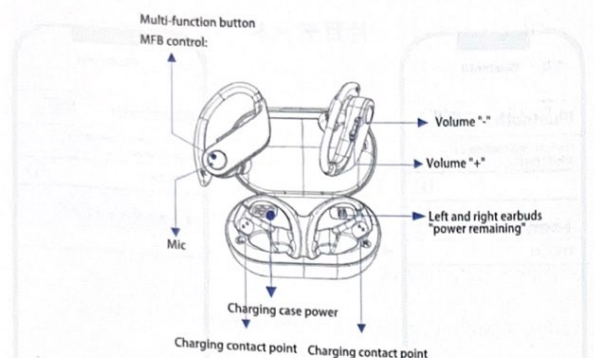

- Call/hang up(One click)
- Pause music(One click)
- Rejected(Twice click)
- Previous song "+" (Long press 2S)
Next song "-" (Long press 2S)
- Play Music(One click)
- Power on (long press 3s)
Power off (long press 5s)



⚠ Wipe sweat left on headphones after exercise to avoid electrolysis reaction



Note: When using the headset for the first time, tear off the clear insulating sticker attached to the left and right headphones charging contact points before putting the headset back in the case. Take it out again and it will turn on automatically.

1


Charging case*1 Headphones*2 Ear caps*4
Instruction manual*1 USB cable*1

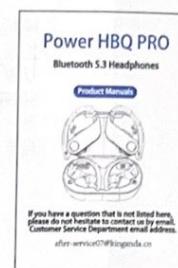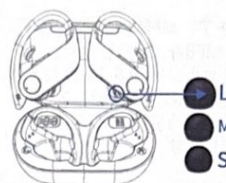


If your ears hurt when you put on the headphones, change to another type of earpiece.

Operation Instructions

1. Manual power on/off

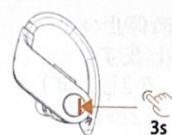

Power on: long press 3s
(Blue light blinking that is on)

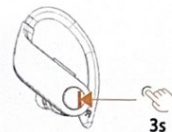

Power off: long press 5s
(Red light blinking that is off)

2

Parameter Specification

Bluetooth Version:	TWSV5.3
Support Contract :	A2DP1.3/HFP16/HSP1.2/AVRCP16/D11.3
Bluetooth Frequency:	2.4GHZ
Bluetooth distance:	10m(No entity obstacles)
Earbud/Charging case	Earbud battery capacity: 100mAh
Battery capacity :	Charging case battery capacity: 950mAh
Call/Music playtime:	Music playtime/talk time in one ear: about 18~20 hours Binaural sound playtime: about 12~14 hours (IOS battery level gauge display)
Standby time :	Standby time in one ear: 240 hours Binaural standby time: 200 hours
Full charge time:	1.5hours
single ear/charging case weight :	Earphones: 6.9g*2/ Charging case: 60g
Package weight:	0.35lb
Product Size:	93*60*34mm

Attention

- Do not handle this product roughly. Do not eject heavy objects into the earphones, and do not place the earphones in a high temperature and humidity environment.
- Do not place this product in the presence of WIFI, routers or other high frequency transmitting equipment.
- Use this product in an effective environment (10m) and ensure that there are no entity obstacles between the Bluetooth device and the earphones (e.g. walls).
- Please charge this charging case using a legitimate charging facility.
- This earphone is compatible with any Bluetooth device.
- If you do not use it for a long time, please recharge it before use.

9

Safety Precaution

The following instructions are to be observed in order to prevent injury to the user or others and damage to property.


Please read the text after carefully understanding the contents of the indications and symbols described here, and be sure to observe them.

● The following symbols classify and explain the degree of harm or damage to humans that may occur if the product is used incorrectly and the contents of the labeling are ignored.

	Dangerous A threat of imminent danger of death or serious injury.
	Warning Any item that could result in death or serious injury.
	Note Maybe cause injury or property damage.

- The following pictorial symbols are used to classify and explain the types of contents to be observed.

attention-grabbing symbol Symbols prohibiting action Symbols directing action

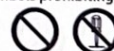


Warranty

- If this product fails within 6 months from the date of purchase in spite of proper use in accordance with the instruction manual, connection examples, and notes, etc., for home use, we will replace it free of charge.
- If the product fails within 6 months from the date of purchase, we will replace it free of charge.
- This product is subject to carry-in repair. The customer will be responsible for shipping charges when sending the product to us.
- Please keep this document in a safe place and do not lose it.

10

2. Calling Features/Calls

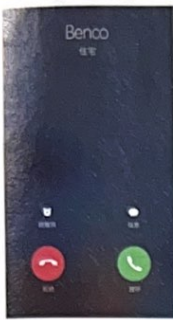

Call/End: Press MFB once.
Reject: Press MFB twice.
Redial: Press MFB twice.
Sir Call: Press and hold the MFB button for 2 seconds

3. Listening to song



Play/pause music: Press MFB once.
Previous song (press "+" for 2 seconds)
Next song (press "-" for 2 seconds)

3

Dangerous

Do not short-circuit the terminals. Do not carry or store the product together with metal necklaces, coins, or other small metal objects as this may cause fire, ignition, or explosion.
Do not throw the product into a fire or charge, use, or leave it at high temperatures that do not heat it, as this may cause it to overheat, catch fire, or explode.

Warning

Never use headphones while riding a bicycle, car, motorcycle, etc. Doing so may cause a traffic accident.

When using the headphones outdoors, be aware of surrounding traffic.

Do not disassemble or modify the headphones.

Do not disassemble or modify the product. Doing so may cause malfunction, overheating, fire, or electric shock.

If the USB cable is not plugged in securely, it may cause fire or electric shock.

Do not touch the main unit or USB cable with wet hands. Do not give a strong shock or throw the product. Doing so may cause fire, burns, or injury. Do not leave within the reach of children or infants, who may accidentally swallow the earphones or earpieces.

Note

Use and store the product in a place with little moisture or dust as it may cause heat generation, ignition, or electric shock. When using this product, do not raise the volume too high. Using the product at a loud volume that irritates the ears for a long period of time may adversely affect hearing. If the volume is turned up too high from the beginning, a sudden loud sound may irritate your ears, turn up the volume gradually.

Do not cover the unit with blankets or clothing while charging or using it. Doing so may cause overheating or fire.


Do not use the product if the USB cable is damaged or the terminals are loose, as this may cause fire or electric shock.

Do not use the product near a fire or stove, in a car, in the bathroom, or in any other place subject to high temperatures or high humidity.

Doing so may cause overheating, fire, or explosion.

11

4. Mono/Dual mode

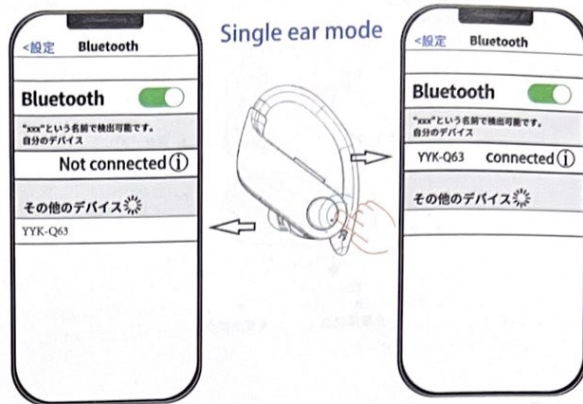

- ① For the first time use, please remove either ear from the charging case.
- ② Open Bluetooth and search for Bluetooth.
- ③ Search for the name of the Bluetooth device "YYK-Q63" to connect.

Place the other one in the case as it is. Or turn off the power. Otherwise, it will not be in one ear mode. Please note.

4

Warranty measures

1. 6 months long warranty period

2. Warranty does not apply to malfunctions caused by failure to follow the instructions for use. Please note that the warranty does not cover any damage caused by failure to follow the instructions for use.

Warranty measures:

Warranty Number:

User Name:

Phone Number:

Address:

Time of Purchase :

Receipt Number:

Edition Seller Name:

Vendor Address:

Edition Store Phone Number:

Failure Description:

UK	REP
----	-----

EVATOST CONSULTING LTD
Suite 11, First Floor, Moy Road Business
Centre, Taffs Well, Cardiff, Wales, CF15 7QR
contact@evatmaster.com




12


Binaural mode

Automatic: Remove from charging case and it will automatically turn on and connect to bluetooth device.

Manual: Press and hold the left and right earphone buttons for 3 seconds to power on and connect to bluetooth device.

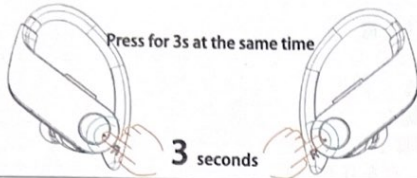

Select "YYK-Q63" in the list of Bluetooth devices on your phone. Enter pairing. A voice will present the word "Continue," and the indicator light will alternating red/blue flashes and then goes out, indicating success to continue.

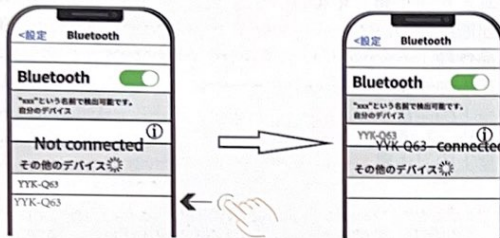

As soon as the earphones are placed in the charging case, they turn off. It will then begin charging. Once the earbuds are removed from the case, they will immediately turn on and automatically pair and connect to a paired Bluetooth device.

Why can't I search for Bluetooth?

Why can't I connect Bluetooth?

1. The distance of Bluetooth is 10m, please make sure there are no obstacles. Besides, the phone needs to be close to the headphones.
2. If any other phone or device has been connected to the headphones, please unpair it first.
3. Please restart the Bluetooth device and try to reset the headphones.